

## Toervaren: UKC124 - Wilderness Tempest 165

### *Instellen zitje, rugleuning en voetsteunen*



*Deze zeekajak heeft een zitje en rugleuning die op verschillende manieren instelbaar zijn. Hieronder lees je wat er mogelijk is. Heb je snel last van slapende benen? Kijk dan speciaal naar punt F. Ook zie je hoe de voetsteunen te verstellen zijn.*




(Laat dit infoblad svp in het dagluik van deze kajak liggen!)

### **Voetsteunen instellen:**



#### **SLIDELOCK XL FOOTBRACES**

The SlideLock Footbrace system is easy to access from inside the boat. Find the black plastic rod that is on the side of the cockpit extending from the footbrace. Lift it up and slide forward or back so your foot is resting comfortably on the footpeg and there is a slight bend in your leg. Release the rod to drop into position locking the footbrace.

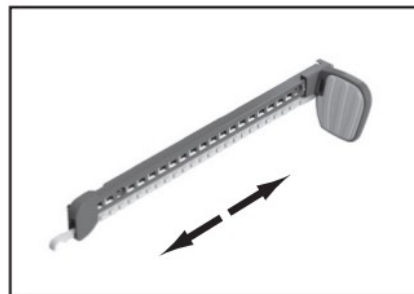

## Rugleuning en zitje instellen:

### PHASE 3 AIRPRO XP – FOCUS, TEMPEST, TSUNAMI\* & ZEPHYR

- Ⓐ Position seat back for lumbar support while paddling or upper back support while relaxing, the Phase 3 AirPro backrest will conform to you providing all day comfort.
- Ⓑ Large comfort holes allow ventilation for air flow while providing cushioning to hard contact areas under the legs and along the spine.
- Ⓒ Smaller holes on the backrest provide ventilation and increased support to the oblique muscles while the holes in the seat pad support the sit bones and provide drainage for water.
- Ⓓ To adjust the height of the backband; tighten or loosen the two web straps extending from the backband to the cockpit rim. Pull the web loop strap located at the front of the seat with the  icon to hold the backband in place or press the gray web cleat lever to loosen.
- Ⓔ To adjust the backstrap fit, tighten or loosen the two nylon web loop straps with the  icon. The straps are anchored above the thigh braces. Further adjustment can be achieved by using the web loop straps located behind the backband.
- Ⓕ The leg lifter height is adjusted with the gray handle and corresponding gray web cleat release levers; to raise the height of the leg lifter gently shift one's weight off of the leglifter while pulling the gray handle. To lower the leglifter press both gray web cleat levers simultaneously.
- Ⓖ The mesh bag located in front of the central controls can be used to store the leg lifter handle, backband height adjustment strap, a water bottle or any other items you would like to keep in easy reach.



The adjustable thigh pads found on some touring and sea kayak models are adjusted by removing the front screw and loosening the back screw. Slide the thigh pad forward or back and in and out to find a comfortable position. Replace the screws and tighten. A good position for the thigh pad is a couple of inches in front of your kneecap or where it's most comfortable.

**Let op: als je dijsteunen gaat verplaatsten, zorg er dan voor dat er geen bevestigingsmiddelen kwijtraken!**